
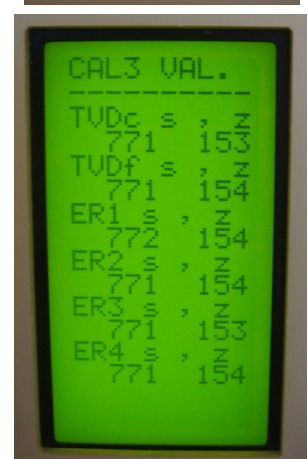
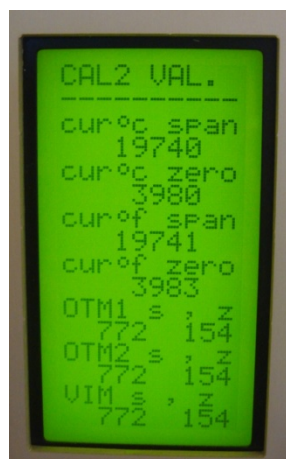


General

It is possible to read the calibration registers of the DCU-RM1 and DCU-RM2 with software 6.00 and later. This can be used to identify missing or faulty calibration.

Start:

- Turn of the power to the RMS system.
- Hold in the MENU button and switch on the power. Hold the button until the display indicate “CALIBRATE DCU”.
- Press the down button until “DISP CAL 1” is marked.
- Press the ENTER button.
- Check that the values are similar to the example below.
- Press the ENTER button again to return to the previous menu.
- Repeat with “DISP CAL 2” and “DISP CAL 3” and check the reading against the examples.

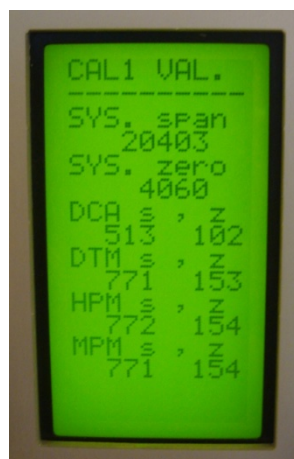

Finish:

- Turn off and on the power again.